
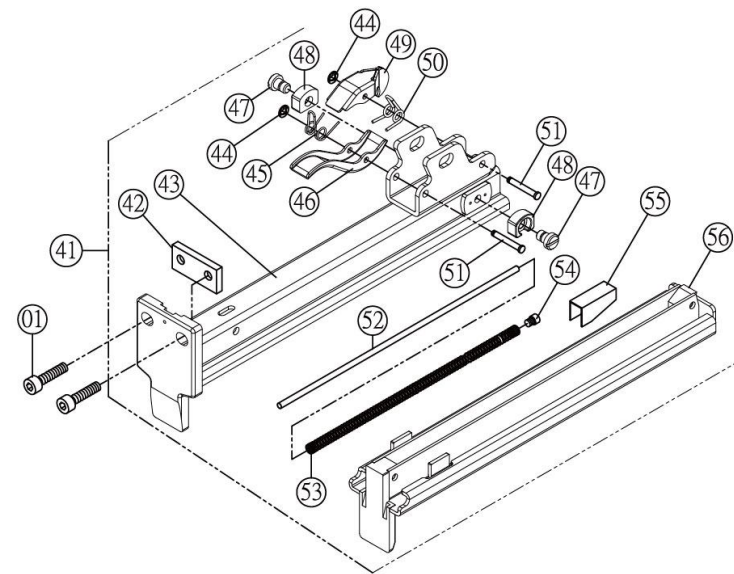


6 MODEL – PEACE/1013J

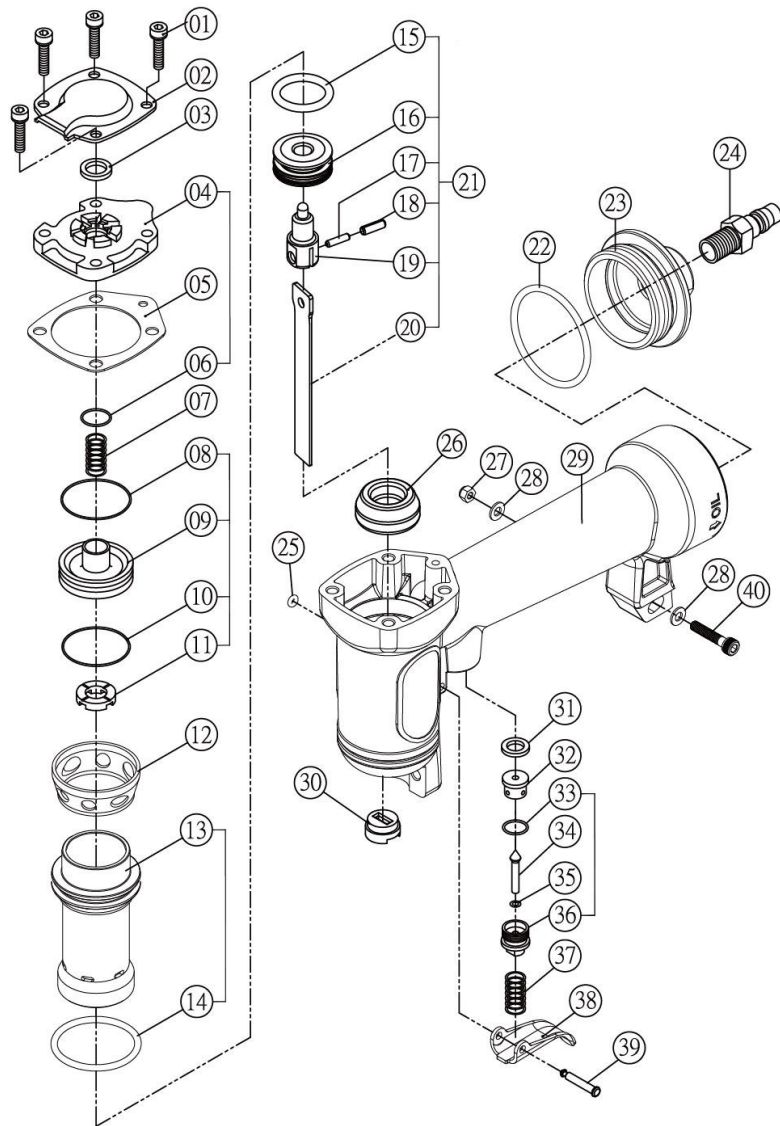

PART LIST

01	PK20001	HD. SCREW-6	6	29	PT10029	BODY	1
02	PT10002	EXHAUST COVER	1	30	PK20026	RETURN SEAL	1
03	PK20003	EXHAUST SEAL	1	31	PK20027	VALVE SEAL	1
04	PK20004	BODY CAP	1	32	PK20028	VALVE HOUSING	1
05	PT10005	GASKET	1	33	PK20029	O-RING	1
06	PK20006	O-RING	1	34	PK20030	TRIGGER PIN	1
07	PK20007	SPRING	1	35	PK20031	O-RING	1
08	PK20008	O-RING	1	36	PK20032	VALVE HOUSING	1
09	PK20009	POPPET VALVE	1	37	PK20033	TRIGGER SPRING	1
10	PK20010	O-RING	1	38	PT10038	TRIGGER	1
11	PK20011	PISTON STOP SEAL	1	39	PT10039	STEP PIN	1
12	PK20012	CYLINDER SPACER	1	40	PK60044	HD. SCREW	1
13	PT10013	CYLINDER	1	41	PT10041	Magazine Assembly	1
14	PT10014	O-RING	1	42	PT10042	SPACER	1
15	PK20015	O-RING	1	43	PT10043	MAGAZINE	1
16	PK20016	PISTON	1	44	PK20019	E-WASHER-2	2
17	PT10017	PIN ASSEMBLY	1	45	PT10045	SPRING	1
18	PT10018	PIN ASSEMBLY	1	46	PT10046	LATCH ARM	1
19	PT10019	PISTON	1	47	PT10047	SCREW-2	2
20	PT10020	DRIVER BLADE	1	48	PT10048	RUBBER STOP	2
21	PT10021	Piston & Driver Assembly	1	49	PT10049	LATCH	1
22	PT10022	O-RING	1	50	PT10050	LATCH SPRING	1
23	PT10023	END CAP	1	51	PT10051	PIN-2	2
24	PK20025	PLUGGER	1	52	PK60049	ROD	1
25	PT10025	O-RING	1	53	PK60047	PUSHER SPRING	1
26	PK20020	BUMPER	1	54	PK20041	SCREW	1
27	PK60042	NUT	1	55	PT10055	PUSHER	1
28	PT10028	WASHER-2	2	56	PT10056	MAGAZINE COVER	1